



GN2 N

ENGLISH

HIGH-EFFICIENCY CAST IRON BOILER FOR LIQUID FUELS and/or GAS
OPERATING, INSTALLATION AND MAINTENANCE INSTRUCTIONS

ITALIANO

CALDAIA DI GHISA AD ALTO RENDIMENTO PER COMBUSTIBILI LIQUIDI E/O GASSOSI
ISTRUZIONI PER L'USO L'INSTALLAZIONE E LA MANUTENZIONE

FRANÇAIS

CHAUDIÈRE en FONTE A HAUT RENDEMENT POUR COMBUSTIBLES LIQUIDES et/ou GAZEUX
INSTRUCTIONS POUR L'INSTALLATION ET L'ENTRETIEN

DEUTSCH

HEIZKESSEL AUS GUSSEISEN MIT HOHEM WIRKUNGS-GRAD FÜR FLÜSSIGE und/oder GASFÖRMIGE BRENNSTOFFE
INSTALLATIONS-, BEDIENUNGS- UND WARTUNGSANLEITUNGEN

ESPAÑOL

CALDERA DE FUNDICIÓN, DE ALTO RENDIMIENTO PARA COMBUSTIBLES LÍQUIDOS y/o GASEOSOS
INSTRUCCIONES DE USO, INSTALACIÓN Y MANTENIMIENTO

PORTUGUÊS

CALDEIRA em FERRO FUNDIDO DE ALTO RENDIMENTO PARA COMBUSTÍVEIS LÍQUIDOS e/ou GASOSOS
INSTRUÇÕES PARA O USO, INSTALAÇÃO E MANUTENÇÃO

NEDERLANDS

VERWARMINGSKETEL in GIETIJZER MET HOOG RENDEMENT VOOR VLOEIBARE en/of GASVORMIGE BRANDSTOF
AANWIJZINGEN VOOR HET GEBRUIK, DE INSTALLATIE EN HET ONDERHOUD

DANSK

STØBEJERNSFYR MED ØGET UDBYTTTE TIL FLYDENDE BRÆNDSTOF og/eller GAS
INSTRUKTIONER VEDRØRENDE BRUG, INSTALLATION OG VEDLIGEHOLDELSE

TÜRKÇE

SIVI VE/VEYA GAZ YAKITLI YÜKSEK VERİMLİ DÖKÜM DİLİMLİ KAZAN

Ελληνικά

**ΧΥΤΟΣΙΔΗΡΟΣ ΛΕΒΗΤΑΣ ΥΨΗΛΗΣ ΑΠΟΔΟΣΗΣ ΓΙΑ ΥΓΡΑ και/ή ΑΕΡΙΑ ΚΑΥΣΙΜΑ
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ, ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ**



ENGLISH

Dear Customer,
Thank you for having chosen the **GN2 N**, an advanced-concept Ferroli boiler featuring cutting-edge technology, high reliability and constructional quality. Carefully read this manual and keep it for future reference.

The **GN2 N** is a high-efficiency heat generator for the production of hot water for heating purposes, suitable for operation with jet burners on gas or liquid fuel. The boiler body consists of cast-iron elements, the shape of which, together with the careful design of the fins, ensure high heat exchange efficiency in all operating conditions.



Important warnings

- This manual provides important indications on the safety of operation, installation and maintenance, and is an integral and essential part of the product. Read this manual before installation and operation. It should be carefully kept for future reference.
- This appliance must only be used for the purposes it has been specifically designed for. This appliance is used to heat water to below-boiling temperatures at atmospheric pressure, and must be connected to a heating and/or domestic hot water distribution system, according to its characteristics, performance and heating capacity. All other uses are considered improper and thus dangerous.
- The appliance may not be opened nor its components tampered with, except for the parts included in the maintenance operations. The appliance may not be modified to alter its performance or use.
- The installation and maintenance operations must be performed according to the standards in force, the instructions of the manufacturer and must be carried out by professionally qualified personnel.
- Incorrect installation or poor maintenance may cause damage to people, animals or things. The manufacturer declines all liability for damage deriving from errors in the installation and operation of the appliance, and in any case from the failure to observe the instructions provided.
- Before performing any cleaning or maintenance operations, disconnect the appliance from the mains power supply using the system switch and/or the corresponding on-off devices.
- In the event of faults and/or poor operation of the appliance, it should be deactivated. Do not attempt to repair the appliance. Contact professionally qualified personnel only.
- After having removed the packaging, check that the contents are intact. The parts of the packaging must not be left within the reach of children, as they are potential sources of danger.

Manufacturer: FERROLI
Via Ritonda 78A 37047 San Bonifacio (VR) - Italia

Trade name: GN2 N 05

Serial number: 0000000000

Heat output: Q (HI)-INPUT: 116 kW; Q (LO)-INPUT: 80 kW

Useful heat output: P - OUTPUT: 105 kW; P - OUTPUT: 73 kW

Max operating pressure: PMS 4 bar; Tmax 110 °C; t20 49 l

Electrical power supply: 230 V - 50 Hz; IPX0D

Other markings: EN303 - Appr.No. PIN; C95.02G 05; CE-0085AQ0771; CE 0085; 1GD055; 8 028693 330169



Certification


The CE Mark attests that Ferroli appliances conform to the requirements specified in the applicable European directives.

In particular, this appliance conforms to the following EEC directives:

- Gas directive 90/396
- Efficiency directive 92/42
- Low voltage directive 73/23 (amended by 93/68)
- Electromagnetic compatibility directive 89/336 (amended by 93/68)

1. OPERATING INSTRUCTIONS

1.1 Control panel

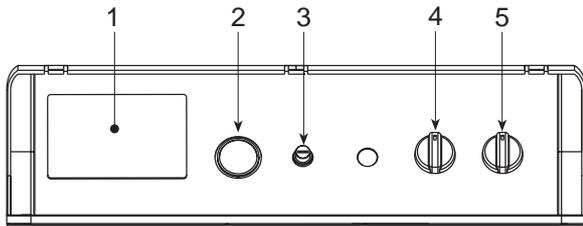

Key

- 1 Ready for electronic control unit
- 2 Thermohydrometer
- 3 Safety thermostat
- 4 Control thermostat, 2 Stages
- 5 Line switch "0 - I - TEST"
- 6 Burner lockout indicator light

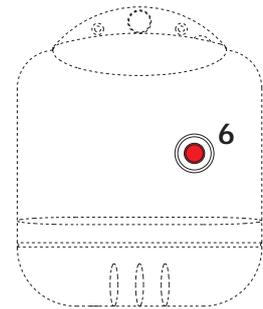


fig. 1

1.2 Ignition

Move the main switch 5 to position "I" to power the boiler and the burner. Refer to the burner manual for the operation of this device.

1.3 Setting

Set the desired system temperature using the control thermostat 4. If the thermoregulation control unit (optional) is connected, refer to the corresponding instruction manual.

1.4 Shut-down

For brief periods of inactivity, simply move switch 5 (Fig. 1) on the control panel to position "0".

For extended periods of inactivity, as well as operating switch 5, the fuel on-off valve must also be closed.

For extended periods of inactivity during the winter period, to avoid damage from frost, add special antifreeze to the system or drain the system completely.

1.5 Anomalies

Two lockout conditions may occur that can be reset by the user:

a - Burner lockout signalled by the corresponding light 6 (Fig. 1). Refer to the burner manual.

b - Activation of the safety thermostat when the temperature in the boiler reaches the limit value above which a dangerous situation may arise.

To reset operation, unscrew cap 3 and press the reset button.

If the problem occurs again, contact qualified personnel or the service centre.

In the event of faults and/or poor operation of the appliance, it should be deactivated. Do not attempt to repair the appliance. Contact professionally qualified and authorised personnel only.

2. INSTALLATION

General instructions

This appliance must only be used for the purposes it has been specifically designed for. This appliance is used to heat water to below-boiling temperatures at atmospheric pressure, and must be connected to a heating and/or domestic hot water distribution system, according to its characteristics, performance and heating capacity. All other uses are considered improper.



THE BOILER MUST ONLY BE INSTALLED BY QUALIFIED AND SPECIALIST PERSONNEL, IN COMPLETE COMPLIANCE WITH ALL THE INSTRUCTIONS REPORTED IN THIS TECHNICAL MANUAL, THE LEGAL STANDARDS IN FORCE, THE PRESCRIPTIONS OF ANY NATIONAL AND LOCAL STANDARDS, AND ACCORDING TO THE RULES OF GOOD PRACTICE.

Incorrect installation may cause damage to people, animals and things. The manufacturer will not be held liable in such events.

Place of installation

The room in which the boiler is installed must have ventilation openings to the outside according to the standards in force. If the same room features a series of burners or exhaust devices that can operate at the same time, the ventilation openings must be large enough for the simultaneous operation of all the appliances.

The place of installation must be free of flammable objects or materials, corrosive gas, dust or volatile substances that, sucked in by the burner's fan, may block the internal tubing of the burner or the combustion head. The environment must be dry and not exposed to rain, snow or frost.

Positioning the boiler

The minimum spaces shown in the figure must be complied with. Specifically, make sure that after assembling the boiler with the burner on the front door, the latter can be opened without the burner hitting against the wall or any other boiler. Leave a free space of at least 100mm on the side that the door swings towards.








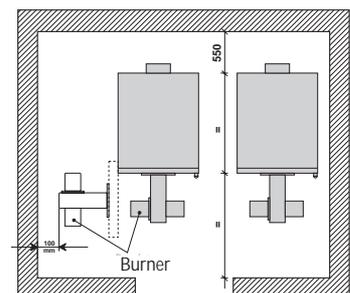






fig. 2

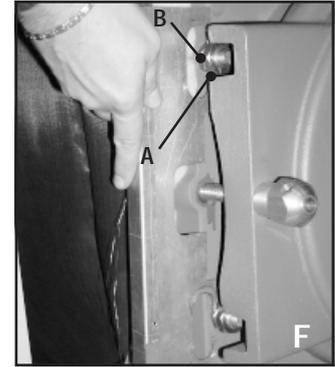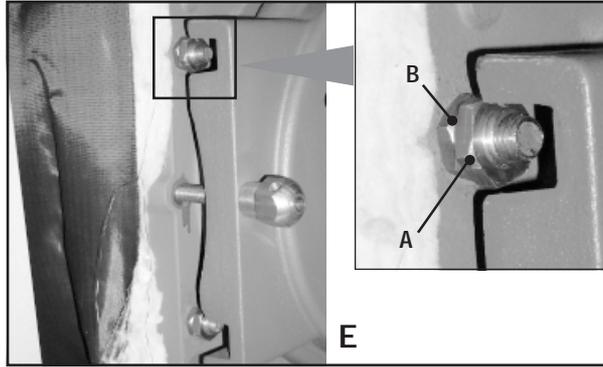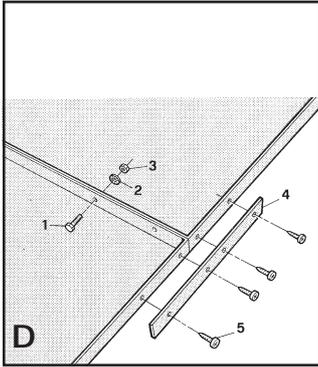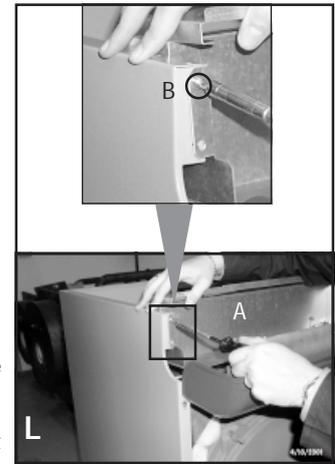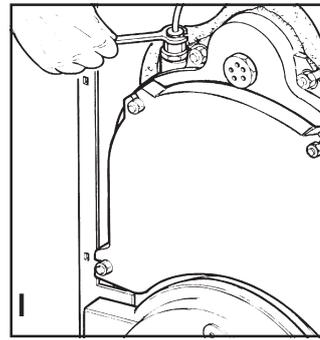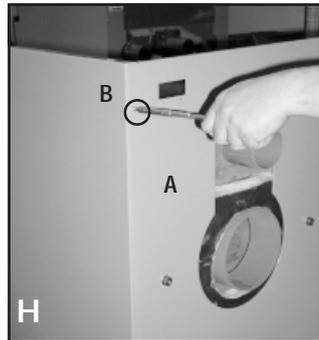

- D Connect the panels together, using the screws 1, the washers 2 and the nuts 3, reinforcing the bottom parts using the blades 4 fastened with the screws 5.
- E Loosen the nuts "A".
- F Insert the side fastening bracket "A" between nuts "A" and "B".

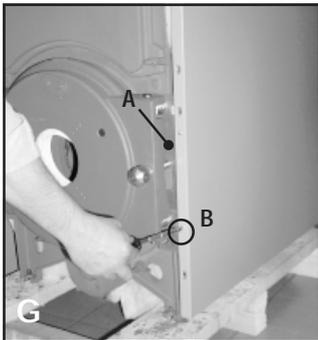


- G Fit the side to the bracket "A" and fasten it using the screws "B" (right side view). Repeat the operations in point G for the left side.
- H Fasten the sides to the rear wall "A" using the screws "B".
- I Unwind the hydrometer capillary tubing and tighten its connector to the sheathing on the front of the boiler body.
- L Fit the wiring protection case "A" using the screws "B" on the sides.

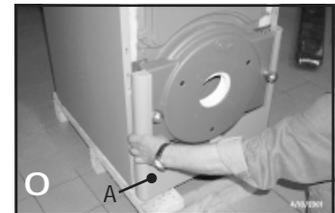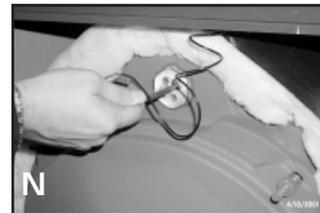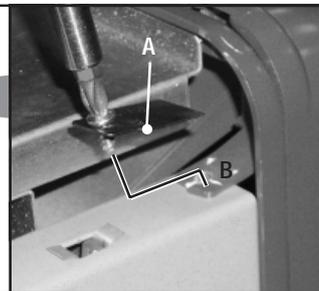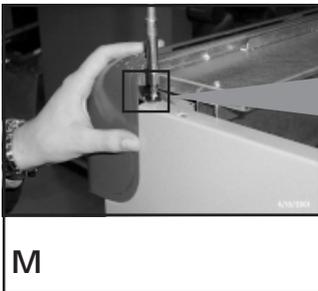

- M Fit the control panel to the sides using the tabs "A". Place the reinforcement spring "B" between the head of the screw and the tab.

- N Insert the 3 bulbs (safety thermostat, boiler thermostat and thermohydrometer).
- O Fit the lower front panel "A".

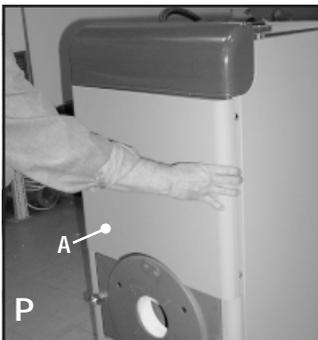

- P Fit the upper panel "A".
- Q Fit the top cover or covers "A", according to the length of the boiler (see table 1, sequence C).

3. SERVICE AND MAINTENANCE

All the adjustment, commissioning and maintenance operations must be performed by Qualified Personnel, in compliance with the standards in force.

FERROLI S.p.A. declines all liability for damage to persons and/or things deriving from the tampering with the appliance by unqualified or unauthorised persons.

Before performing any cleaning or maintenance operations, disconnect the appliance from the mains power supply using the system switch and/or the special on-off devices.

3.1 Commissioning

Checks to be performed on first ignition, and after all maintenance operations that involve the disconnection of the appliance from the systems or intervention on the safety devices or parts of the boiler:

Before first ignition

Before igniting the boiler for the first time, check that:

- a the system is filled at the right pressure and any air has been correctly vented;
- b there are no water or fuel leaks;
- c the electrical power supply is correct;
- d all the flues have been installed correctly and not too near to or across any flammable parts;
- e there are no flammable substances near the appliance;
- f the burner is suitably sized for the output of boiler;
- g the water on-off valves are open.

First ignition

After having carried out the preliminary checks, the following ignition operations can be performed:

- 1 Open the fuel on-off valve.
- 2 Set the thermostat 4 (Fig. 1) to the desired value.
- 3 Close the switch upstream from the boiler and switch 5 (Fig. 1) on the control panel.

At this stage, the burner will be ignited and the boiler will start operation.

After first ignition

After first ignition, check that:

- 1 The door of the burner and smokebox are well sealed.
- 2 The burner is working correctly. This check should be performed using the required instruments, following the manufacturer's instructions.
- 3 The thermostats are working correctly.
- 4 Water is circulating in the system.
- 5 The flue gas is completely expelled through the flue.

3.2 Adjustments

Adjusting the burner

The efficiency and correct operation of the boiler depend above all on accuracy of the adjustments made to the burner.

Carefully follow the instructions provided by the manufacturer. Two-stage burners must have the first stage adjusted to an output that is no lower than the minimum rated output of the boiler. The output of the second stage must not be greater than the maximum rated output of the boiler.

3.3 Shut-down

For brief periods of inactivity, simply use switch 5 (Fig. 1) on the control panel.

For extended periods of inactivity, as well as operating switch 5, the fuel on-off valve must also be closed.

3.4 Maintenance

To ensure the maximum reliability of the heating system and minimum running costs, the boiler must be cleaned regularly, at least once a year. These maintenance operations must be performed by qualified and specialist personnel.

Cleaning the boiler

- 1 Disconnect the power supply to the boiler
- 2 Remove the upper and lower front panel.
- 3 Open the door by unscrewing the knobs.
- 4 Clean the inside of the boiler and the entire flue gas discharge path, using a brush or compressed air.
- 5 Close the door again, and fasten it using the knob.

To clean the burner, refer to the instructions provided by the manufacturer.

4. TECHNICAL SPECIFICATIONS

Model	Heat input gas+oil (NHV) kW		Heat output kW		N° elem.	Water content dm3	Operating pressure bar	A mm	B mm	Ø mm	Comb. chamber pressure drop Δp mbar	Comb. chamber volume dm3	Water pressure drop		Body weight kg
	Max	Min	Max	Min									Δt 10	Δt 20	
GN2 N 05	98,8	80	90	73	5	49	4	647	130	180	0,4	63	2,8	-	310
GN2 N 06	117,4	95	108	87	6	57	4	757	130	180	0,4	77	3,4	-	361
GN2 N 07	136,9	110	126	101	7	65	4	867	130	180	0,4	91	4,8	0,5	412
GN2 N 08	156,5	125	144	115	8	73	4	977	154	200	0,4	104	6,5	0,8	463
GN2 N 09	176,0	140	162	129	9	81	4	1087	154	200	0,4	118	8,5	1,8	514
GN2 N 10	195,6	155	180	143	10	89	4	1197	154	200	0,4	132	11	2,2	565
GN2 N 11	215,2	170	198	157	11	97	4	1307	154	200	0,4	146	13	2,6	616
GN2 N 12	234,7	185	216	171	12	105	4	1417	154	200	0,4	160	16	3,2	670
GN2 N 13	254,3	200	234	185	13	113	4	1527	154	200	0,4	174	19	4	725
GN2 N 14	273,9	215	252	199	14	121	4	1637	154	200	0,4	187	23	4,5	780

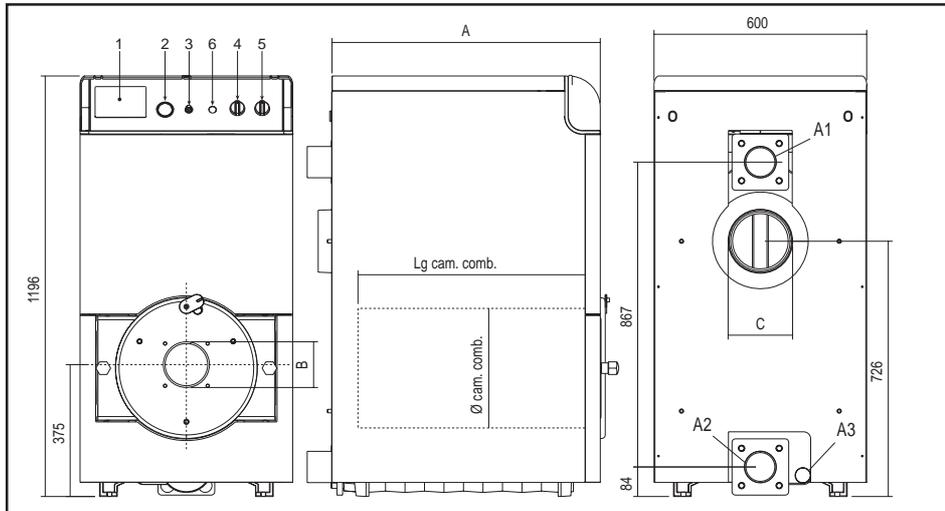


fig. 3

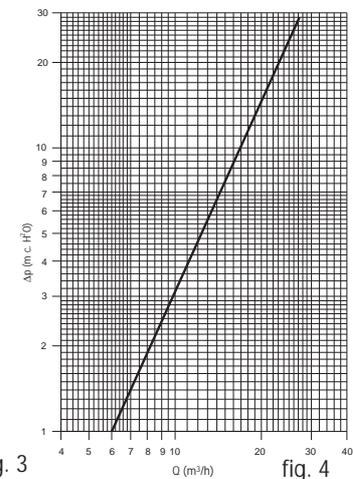


fig. 4

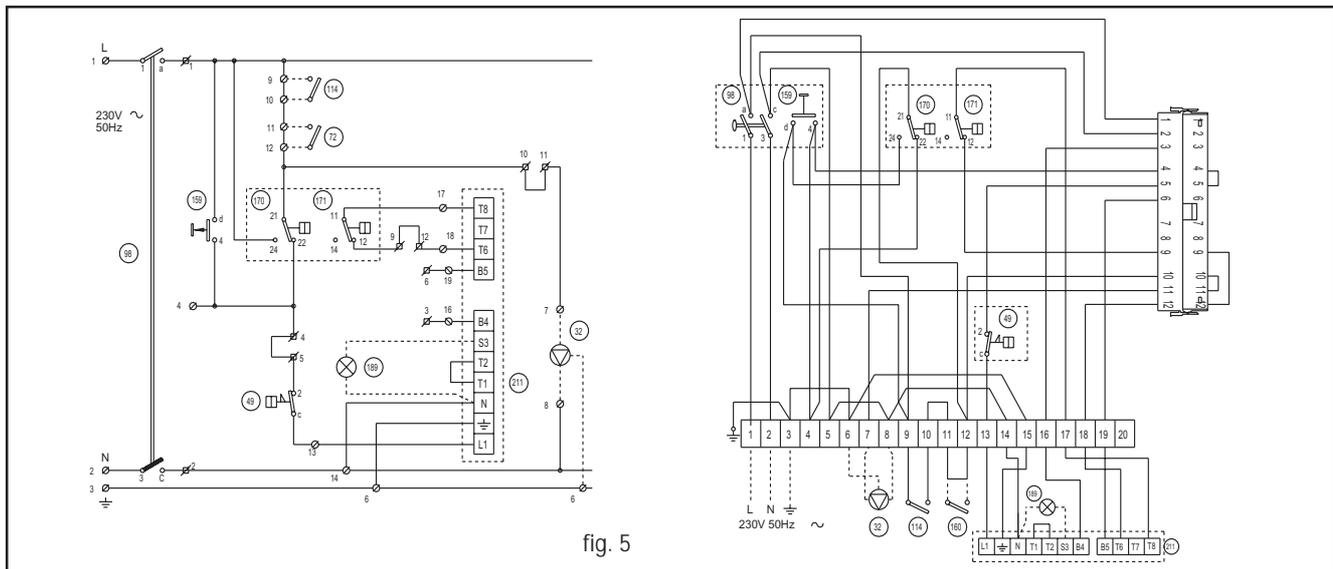


fig. 5

Legenda

- | | |
|---------------------------------------------|------------------------------------------------------|
| 1 Ready for electronic control unit | 32 Pump (not supplied) |
| 2 Thermohydrometer | 49 Safety thermostat |
| 3 Safety thermostat | 72 Room thermostat (not supplied) |
| 4 Control thermostat, 2 nd Stage | 98 Switch |
| 5 Line switch | 114 Water pressure Switch |
| 6 Burner lockout indicator light | 159 Test knob |
| a1 Central heating flow outlet DN80 - 3" | 160 Auxiliary contact |
| a2 Central heating return inlet DN80 - 3" | 170 Boiler setting thermostat, 1 st stage |
| a3 Boiler drain 3/4" | 171 Boiler setting thermostat, 2 nd stage |
| | 189 Lockout indicator light (not supplied) |
| | 211 Burner connector |

Note The dashed sections of wiring are the responsibility of the installer